





SY Series Solenoid valve

How to mounting and using


1. Handle with care;
2. Prevent rough handling of miniature pilot valve & coil;
3. Tightening torque of 0.1~0.15N.m is sufficient to secure pilot valve (M1.6 screw), in case of tampering;
4. Manual override:
 - 4.1. Ensure no personnel is in the way, prior to activating manual override;
 - 4.2. For push button option, activate by push the button in the direction shown;

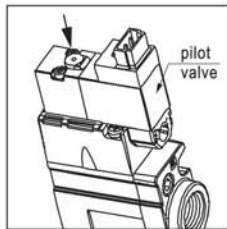

- 4.3. For slotted option, push the slotted button with correct size screw driver & turn to lock;

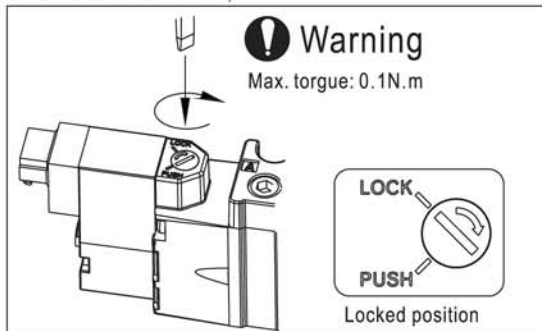


- 4.4. For lever option, it can be simply turn the lever to detent at the manually overriding position.

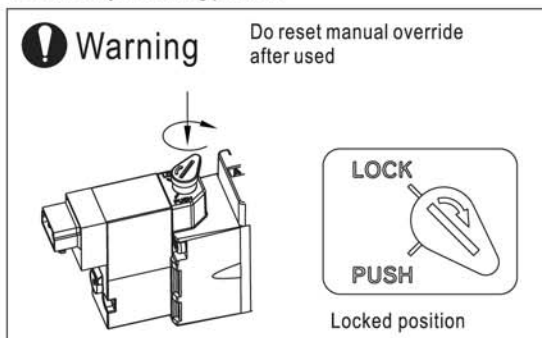

- 4.5. Do reset manual override after used.

Inner structure

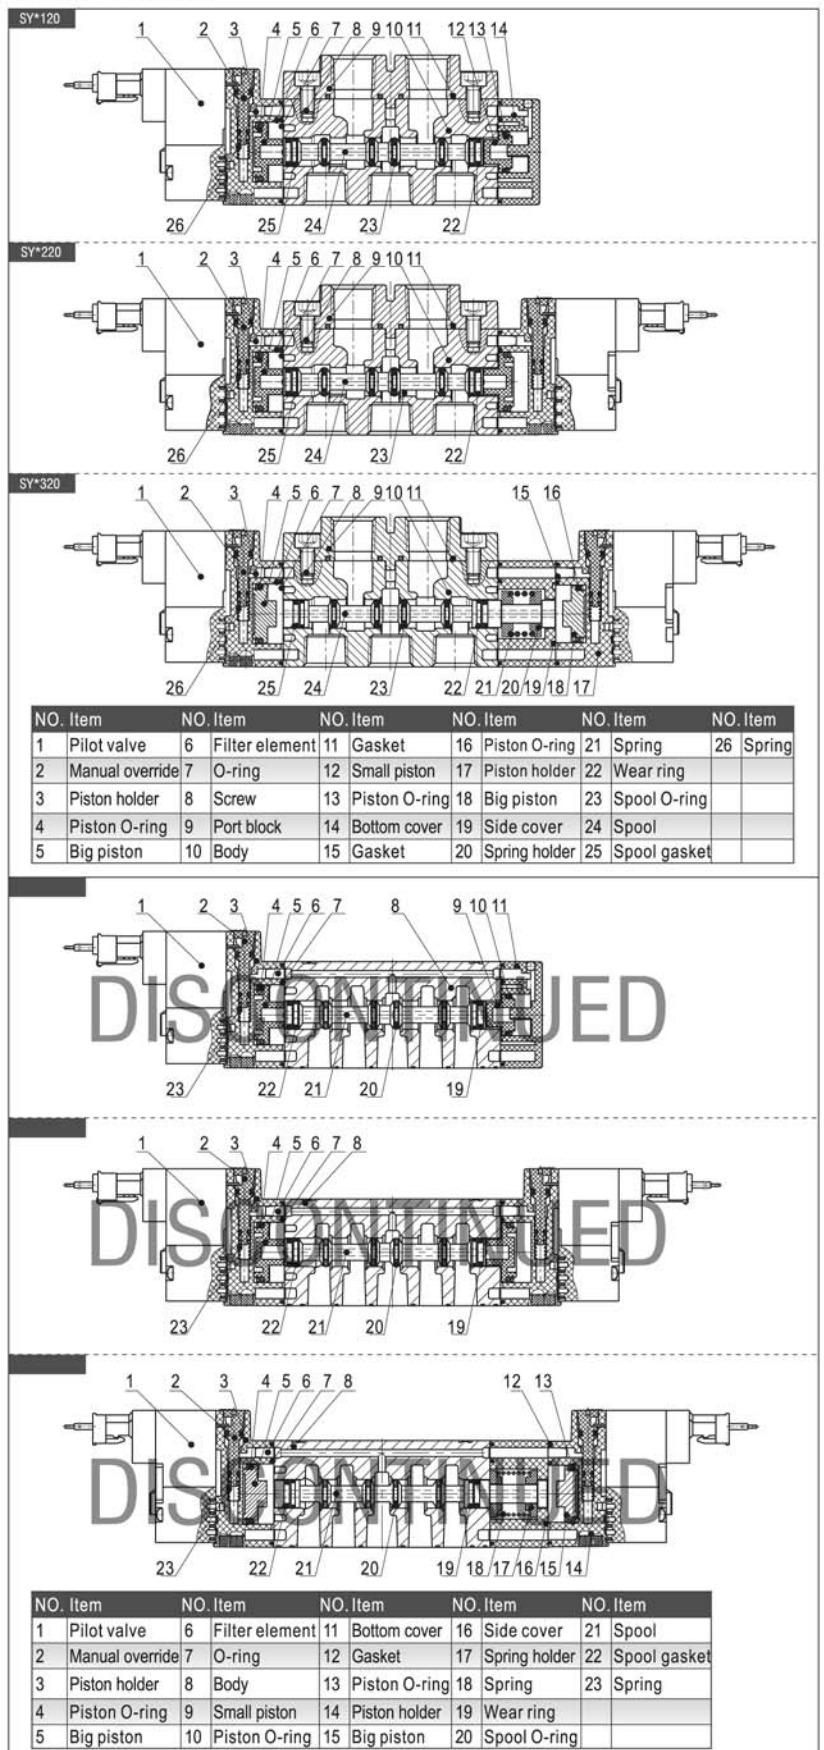




CE ISO9001


SY Series Solenoid valve

■ Dimensions


SY5120-L (1/8")

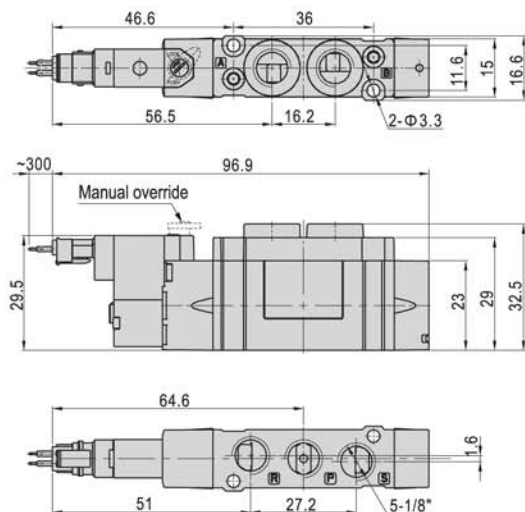


SY5120-M (1/8")

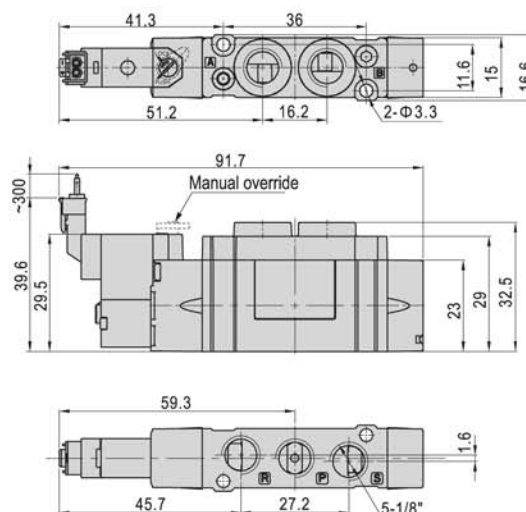


SY5220-L (1/8")

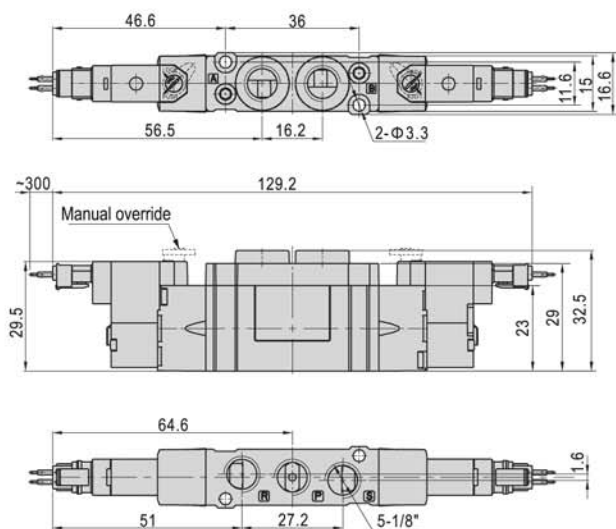


SY5220-M (1/8")

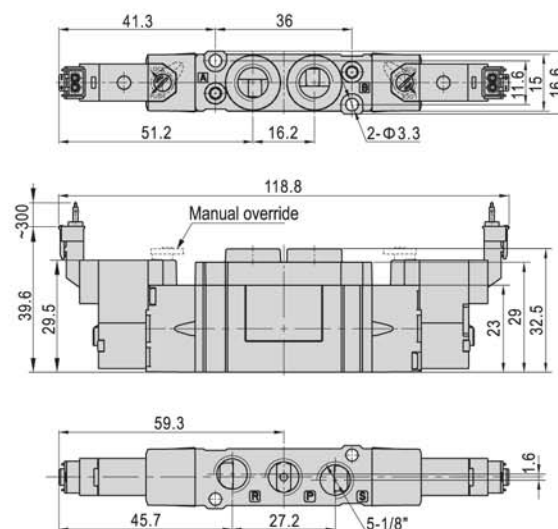

SY5320-L (1/8")

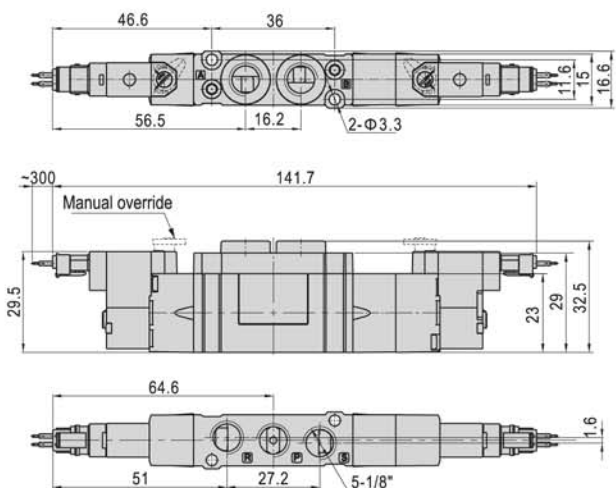

SY5320-M (1/8")

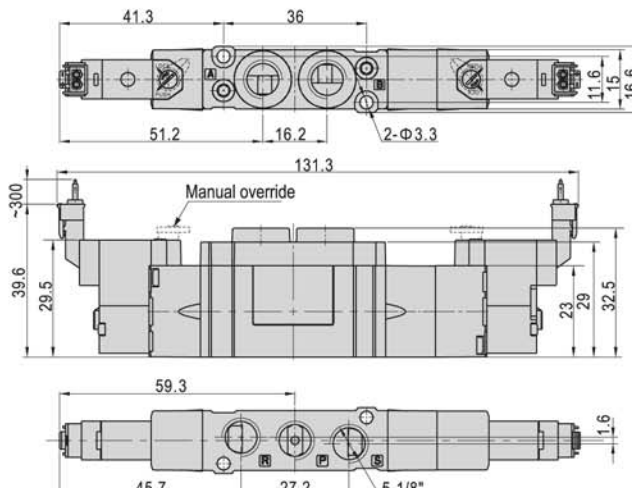





CE ISO9001

SY Series Solenoid valve


SY7120-L (1/4")

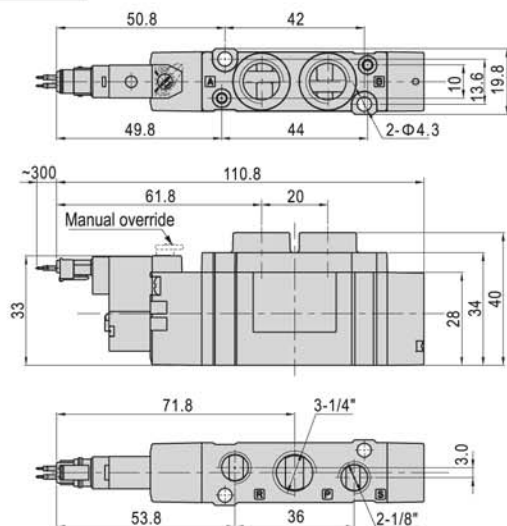


SY7120-M (1/4")

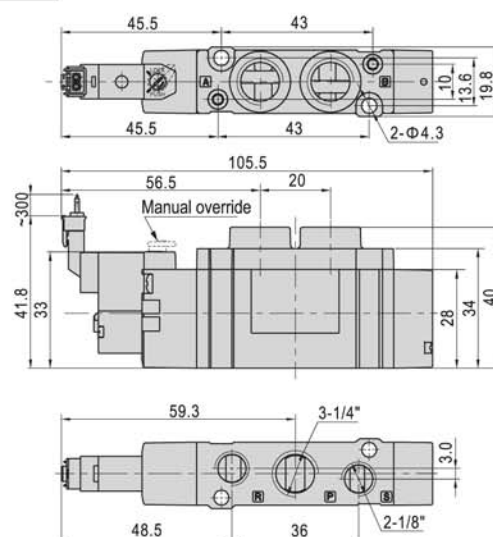


SY7220-L (1/4")

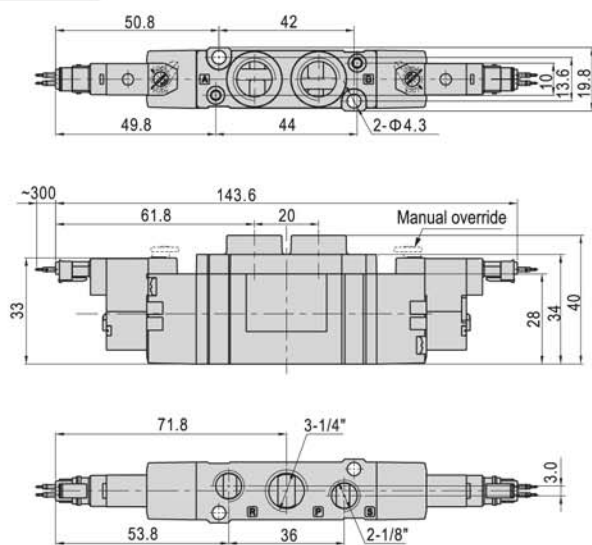

SY7220-M (1/4")

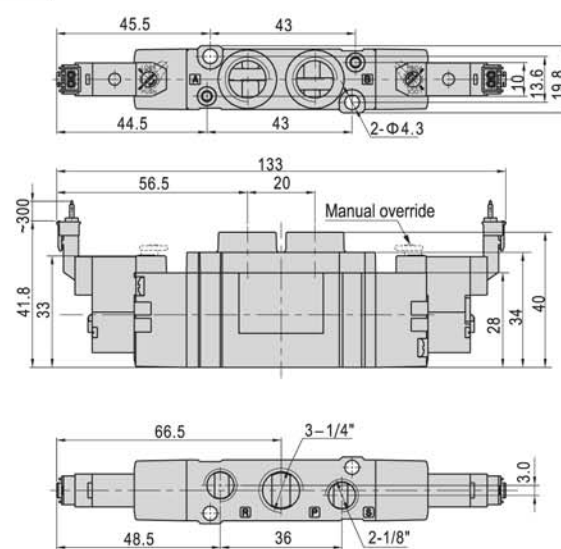

SY7320-L (1/4")

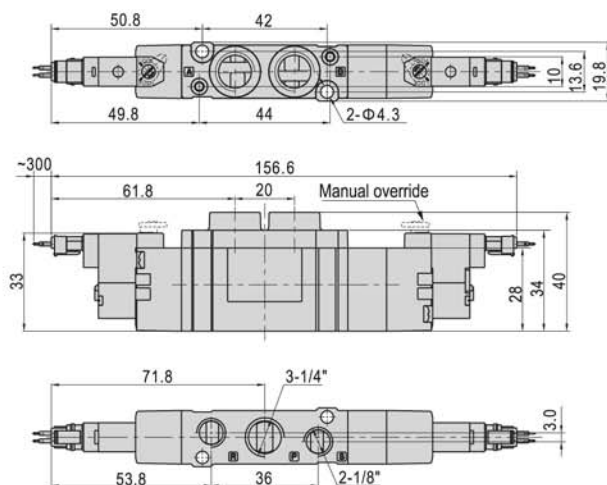

SY7320-M (1/4")

